


ITEM #: W70FP18

ASSEMBLY INSTRUCTION

 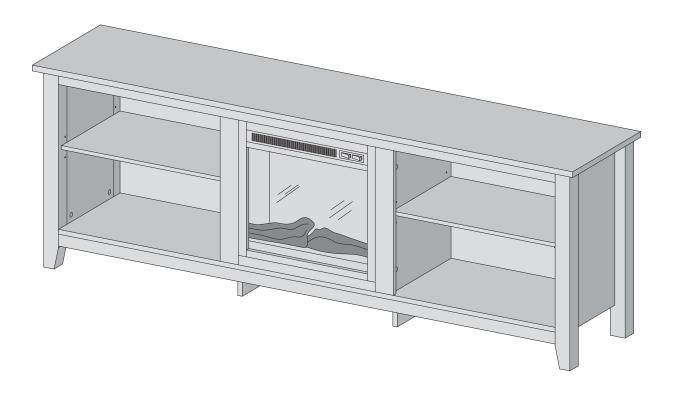


For our most up-to-date instructions, to request missing, lost, or broken parts, or for any other Customer Service issues, please visit our website at **www.walkeredison.com** or call us at 877-207-5906.

Revised 09/2015

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




 VI. A Phillips head screwdriver is required for the assembly of this product.



 
VII. Power tools should not be used to assemble this product.



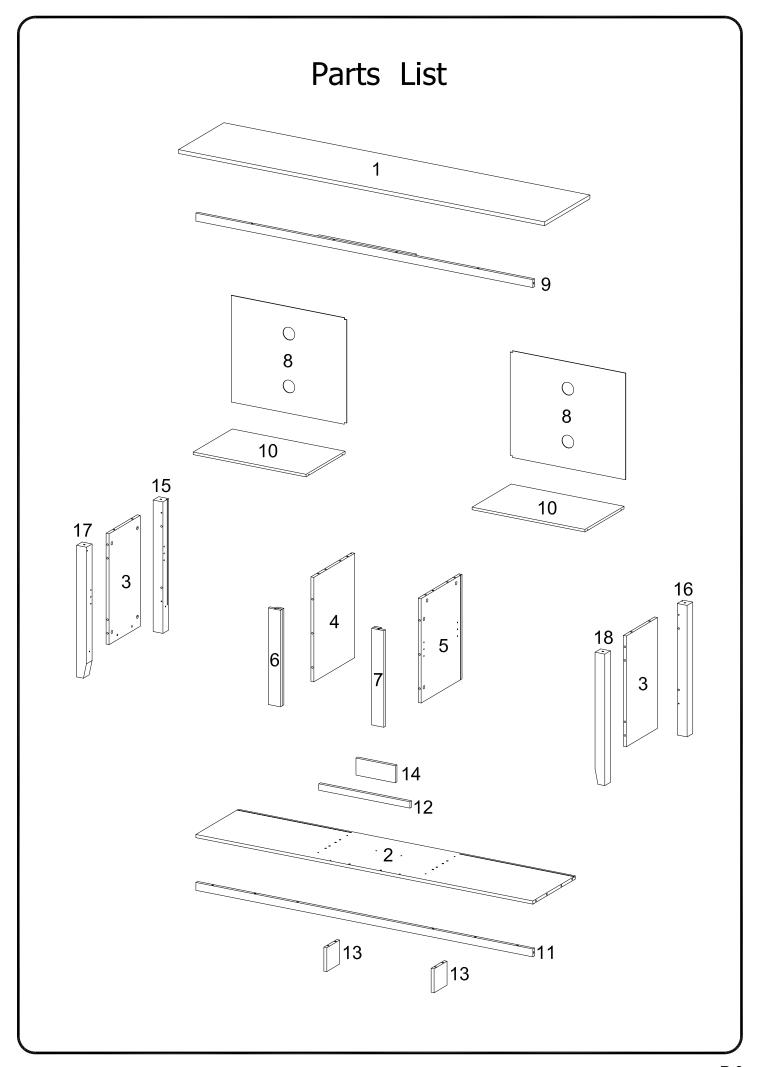


Hardware List


Α		Ø8x30	Wooden dowel	34	pcs
В		Ø6x35	Cam bolt	36	pcs
С		Ø15x11	Cam lock	36	pcs
D	@	Ø6x50	Bolt	8	pcs
E			Plastic wedge	8	pcs
F	<	Ø3x17	Flat-head screw	8	pcs
G		Ø5x16	Shelf support pin	8	pcs
Н	<i>₹aaaaaaa</i> (}	Ø4x31	Screw	2	pcs
J			Fireplace Insert (F18V66L)	1	рс
K		Ø3x12	Screw	8	pcs
L		M4	Wrench	1	рс
M			Glue tube	1	рс
N	0	Ø20	Sticker	36	pcs

 

Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

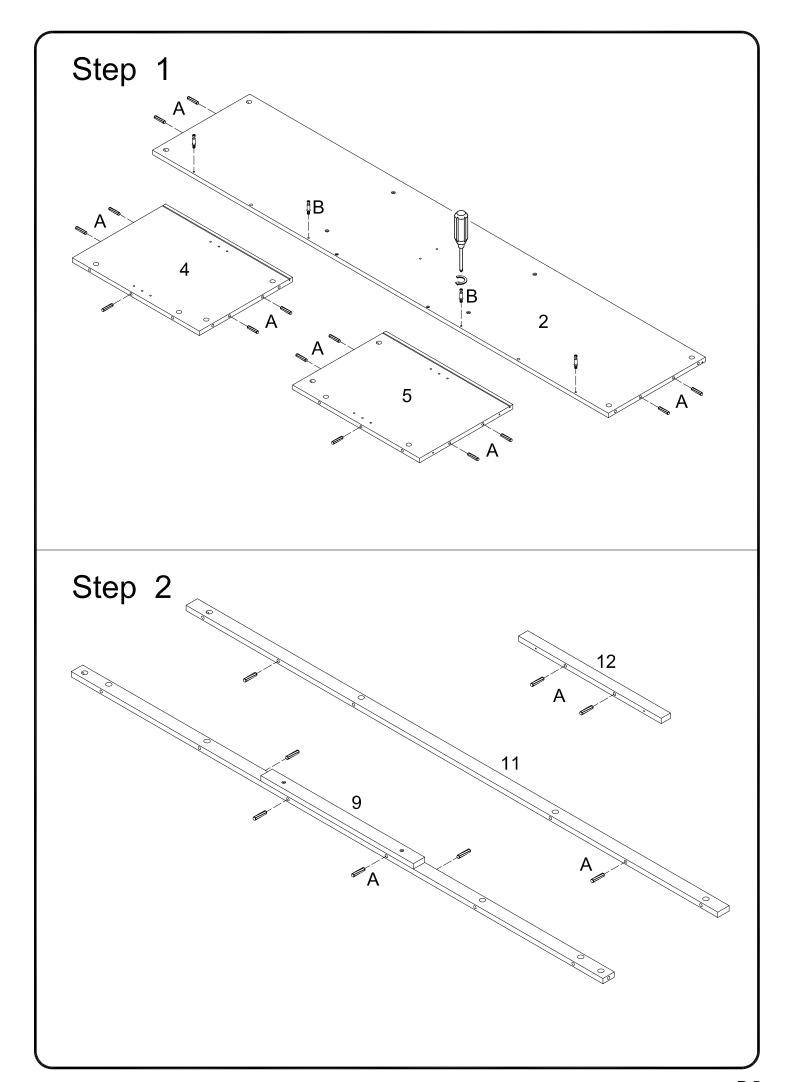

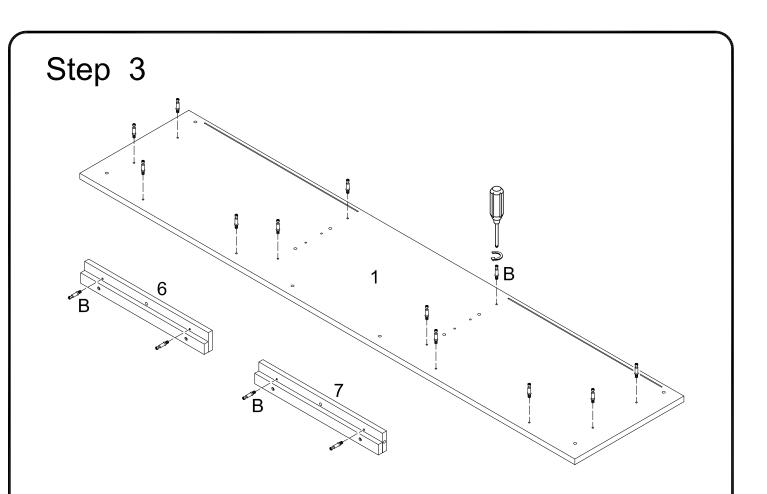

Insert the cam bolt (B) into the top panel (1) and support Front Panel (6,7) .

