


W Walker[®]
Edison
furniture company


Item # : UB30RCW
Assembly Instructions

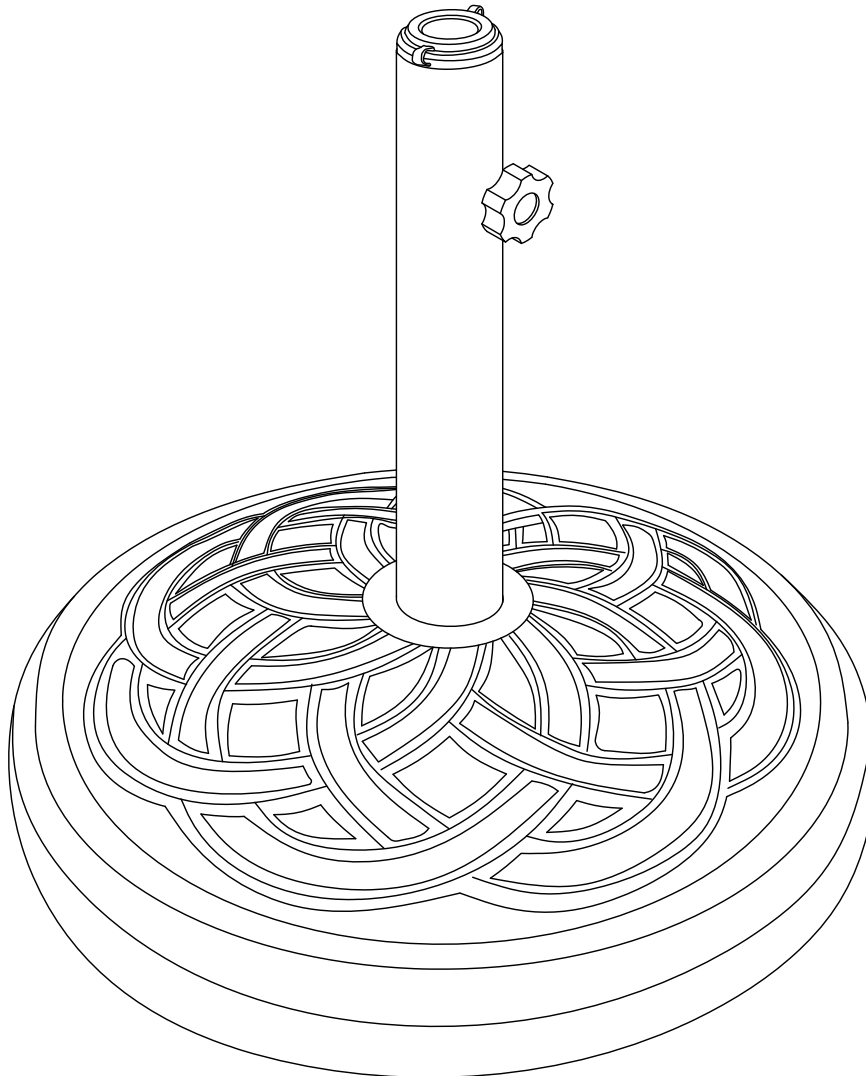




*To request missing, lost or broken parts , or for any other customer service issues,
please visit our website at www.walkeredison.com or call us at 877-207-5906.*

Revised 06/2016

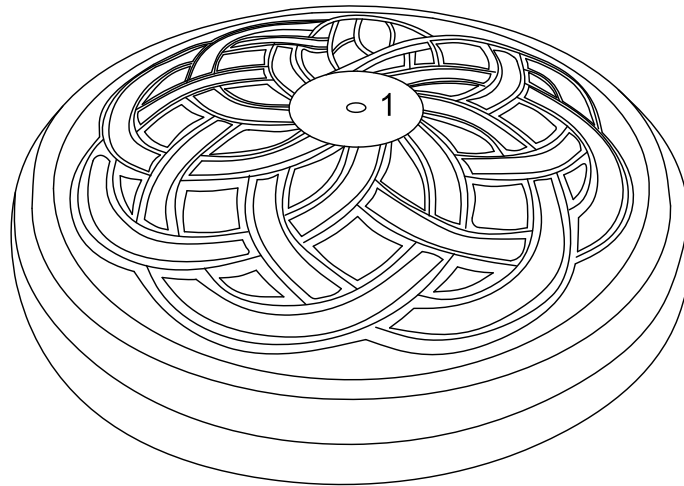Parts List




Hardware List

A		Washer	1 pc
B		Nut	1 pc
C		Knob	1 pc


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

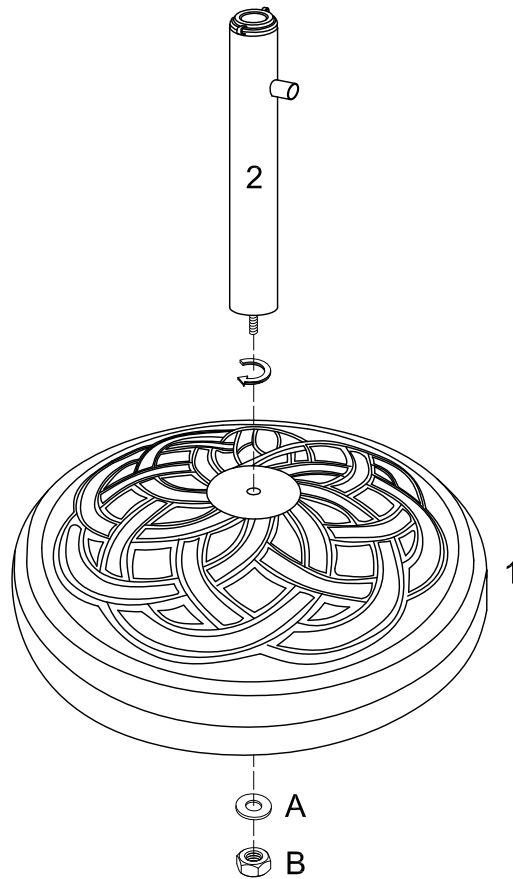


Insert the Metal Tube (2) to the Center Hole of the Round Base (1) , and secure it with the Washer (A) and Nut (B).

Step 2

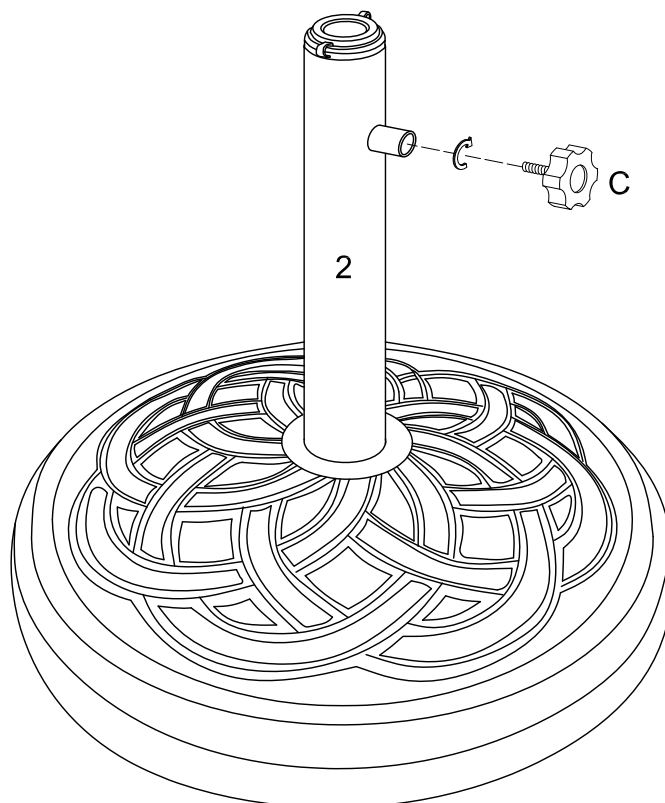

Twist the Knob (C) to the Metal Tube (2) as per diagram.

Step 3

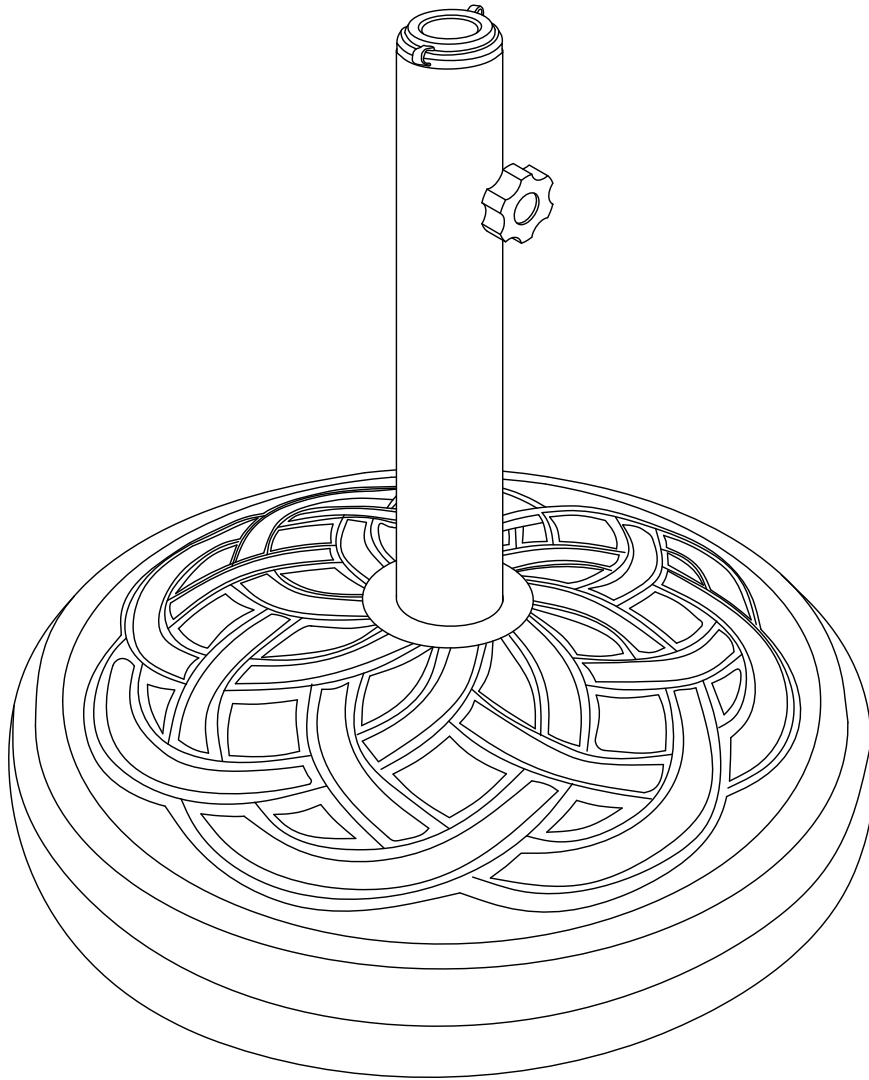

Final Assembly