


Item # : DB56HPDWT Assembly Instructions



Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

Revised 06/2017

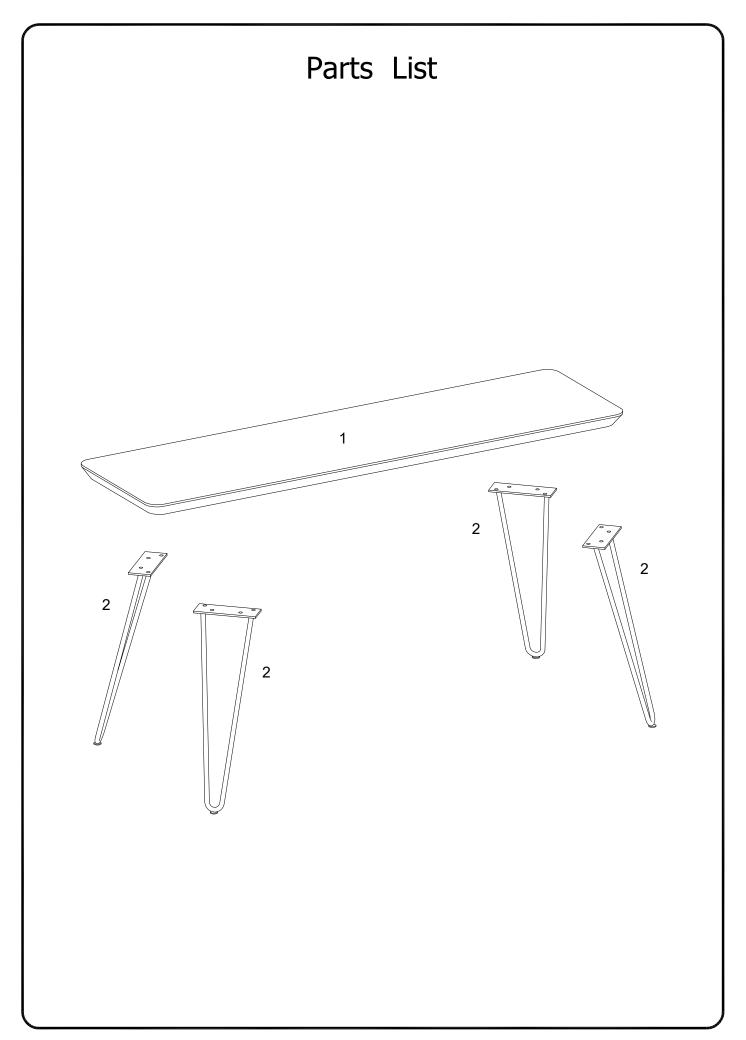

Hardware List

A Ø6x20mm Bolt 16 pcs

B M 4 Wrench 1 pcs

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

